

Content:

Introduction _____ **page 2**

Purpose _____ **page 2**

Equipment _____ **page 2**

Fastening _____ **page 2**

Specifications _____ **page 2**

Operations _____ **page 3**

Display _____ **page 3**

Getting ready to start using your device _____ **page 4**

Settings _____ **page 4**

Menu selection _____ **page 5**

Resolution of the malfunction _____ **page 5**

Warranty _____ **page 6**

Power supply unit MT MUSTANG TATTOO POWER EXPERT

Congratulations on purchasing MT Mustang Tattoo power equipment, we appreciate your choice! Despite its compact size, the Intelligent power unit Expert was created to improve and increase the efficiency of the quality over the tattoo due to its reliable and convenient setting that guarantee you stability and maximum functionally.



This manual will allow you to appreciate the advantages and capabilities of the power unit. Before you begin to use the power unit, please read the manual carefully.

Purpose: power supply unit for induction and rotary tattoo machines.

The package includes power supply unit, adapter, operation manual and power converter for Europe outlet.

Fastening: magnetic fastening for fixing the unit is ideal for metal surfaces. It does not slip or scratch the table due to the protective lining.

Specifications

Intelligent Power Supply with display and interface translated in two languages (Rus., Eng.)

Build-in storage for 6 machines;

5 operation modes with induction and rotary machines;

4 individual menu selections

Voltage 1.5-17V;

Auto detection function for machine types;

The function of the time calculation/cost of the session in rubles/dollars/euros.

Additional features:

- Ability to control your equipment without a pedal.
- Build-in battery (expires in 5 years).
- Short circuit protection.
- Sleep mode.
- Module for working with wireless equipment (up to 128 connection options)
- Sound settings/key tone and display brightness.
- The possibility of upgrading in the service center MT Mustang Tattoo.

Operations



or

- increase or decrease of the voltage and the transition between menu items.



or

- time settings, mode shift, menu selection, amount of the machines, currency, brightness, key tonality, language.



- By pressing and holding the button the device goes into sleep mode.



by pressing two buttons together at the same time you will shift your device back to the menu settings.



- settings saving and exit to the main screen.



- turning on or off the pedal stiking.

Display

The power supply is supplied with a monochrome display with an indication of a blue light. The screen always displays the operating voltage and previously selected storage. The rest of the options depends on the screen.



Getting ready to start using your device

Power supply unit is automatically loading when you plug it into the network.

To enter the settings menu, press and hold the buttons at the same time



To select the specific menu item, press



To save your settings and exit, press on the button



Settings


Time – hours: click on this item and set the hour using the “S” or “L” buttons.

Time – minutes: select an item and set the minutes with the “S” or “L” buttons.

Amount of the machines - 2,4,6

Mode: you can select the operation mode for the induction/rotary tattoo machines by using the “S” or “L” arrows.

Auto mode: to activate or deactivate auto detection, press “S” or “L” buttons.

Pedal sticking: in the main screen mode, press and hold the  button, to enable or disable the sticking.

Screen brightness: adjustable with "S" or "L" buttons.

Error display: to disable or enable the mode, press S/L buttons.

Output speed: the shifting operation between three different speed levels is done with the S/L buttons.

Key sound: To adjust key sound press “S” or “L” buttons.

Key tone: 8 tone levels. Press “S” or “L” buttons to select.

Price: this function allows you to calculate the hourly cost of the session. Press S or L buttons to decrease or increase the rate.

Currency: to select a currency, press “S” или “L”.

Radio (wireless pedal connection): To start searching the device, press “L” and then press on the pedal once.

Language: to select a navigation language, press “S” or “L”

Exit: In order for you to get back to the main screen you have to press “S”


Version: software version.

Operation time: the total time amount of the machine during the work session.

Menu selection

In the main screen mode, press and hold «S» to select on the four screens.

1. Operating voltage is located on the left side of the screen. Hertz, heating, operation of the machine mode and the amount of the ampere are located on the right side of the screen.

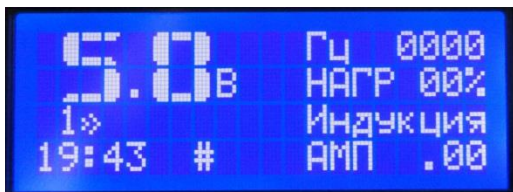

2. Operating voltage displayed with the large print on the screen. Coast, duration of the session and runtime of the machine are displayed with small print.



3. The clock is displayed in upper corner of the screen. The voltage, duration of the session and run time of the machine are displayed under the clock.



4. The screen displays the operating voltage only.



Elimination of malfunction: To test the device and to resolve your problems quickly, please contact the MT Mustang Tattoo service center. As a part of the warranty agreement our team members will repair your tattoo machine with no additional charge.

Warranty

Warranty: The warranty on the case is valid for a period of 5 years. The warranty on the operating parts is 1 year. **Attention!** The official warranty takes effect after registration on the website <http://mustang-tattoo.ru/guarantee>. You must sign-up within 30 days of the purchase date.

Current warranty covers only factory failures and it does not apply to wear and tear of equipment parts as a result of improper operation.

The warranty does not apply to equipment if:

- the equipment has been affected by aggressive non-alcoholic antiseptics;
- the equipment has traces of impact that could have been reflected on the frame;
- the equipment has signs of corrosion and treatment;
- the equipment has attempts of self-modernization;

The warranty is terminated if:

- the equipment is used for other purposes;
- the equipment is being connected to a third-party adapter (not recommended for this unit);
- the equipment is sterilized in an autoclave or a dry heat cabinet;

The product can be exchanged for the same or a similar model within 3 months of the purchase date. It is possible to return the product within 2 weeks.

Contact service center:

Moscow, st. Narodnaya, 14, p. 1, tel. +7 (499) 754-85-25

info@mustang-tattoo.ru

<https://mustang-tattoo.com>